



## TECNODECK ARCHITECTONIC PROFILES
















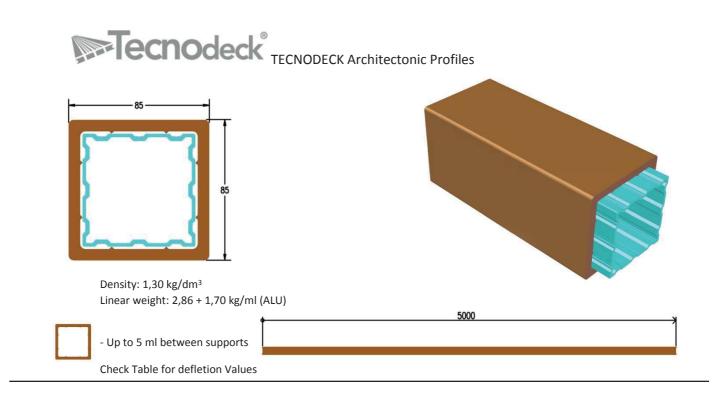

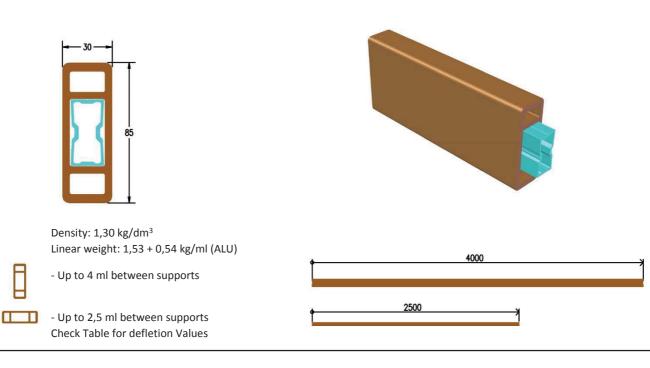

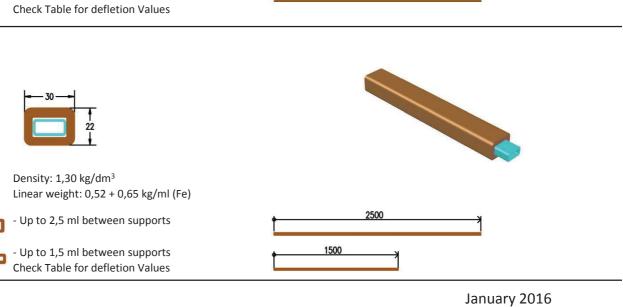





## Basic mounting rules

- . Tecnodeck profiles must always work together with metal reinforcement profiles.
- . The fixation of Tecnodeck profiles must be made to the metal reinforcement profiles and never to the composite profiles. All holes in WPC must be to pass and having a larger diameter than the screw hole that passes through it, so that the screw will never be a constraint for WPC. The composite hole diameter should be larger than the screw diameter at least 2mm/profile meter.


The tightening of the screws at the composite should never crush the composite profile and must allow the free movement of the profile.

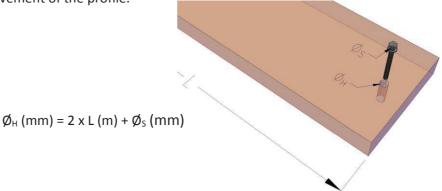


- . A distance between the top ends of a profile and rigid obstacles is required (between walls or similar) at the rate of 1mm / ml.
- . Please validate the fixations with Tecnodeck technical department.
- . Any type of assembly not specified, must be previously approved by Tecnodeck.
- . For quantities, bespoke profiles are possible under request.
- . Distances between supports:

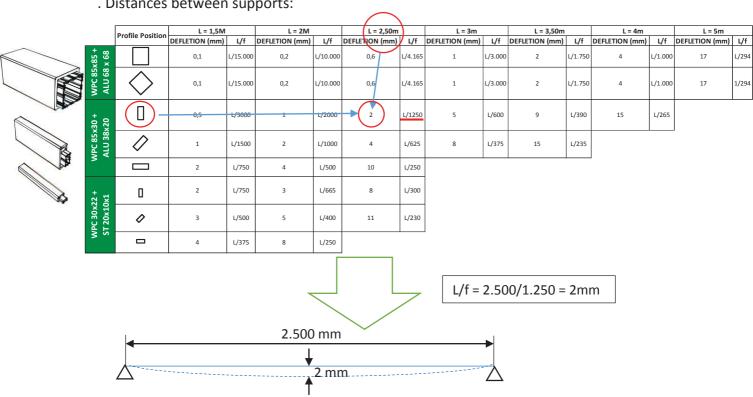


## When fixing with screws profiles:

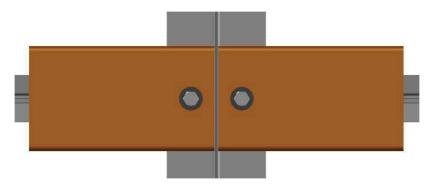

- Inner structural profile;
- Needs a 1mm/m gape betwen top profiles;

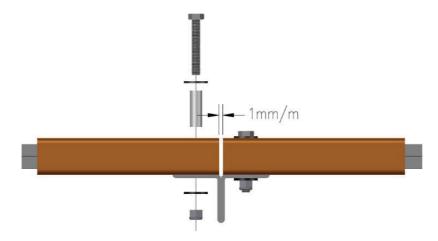



- Use a inner bushing to prevent smashing wpc profile;
- Protect the wpc with oversize washers

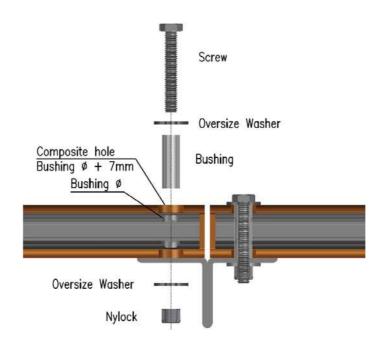



- Consider wpc hole diameter at least 7mm more than bushing outside diameter;
- Structural profile hole diameter equal to bushing outside diameter.
- All these parameters must be considered in any WPC profile, such as 85x85, 85x30 and 30x22.
- Some different examples:

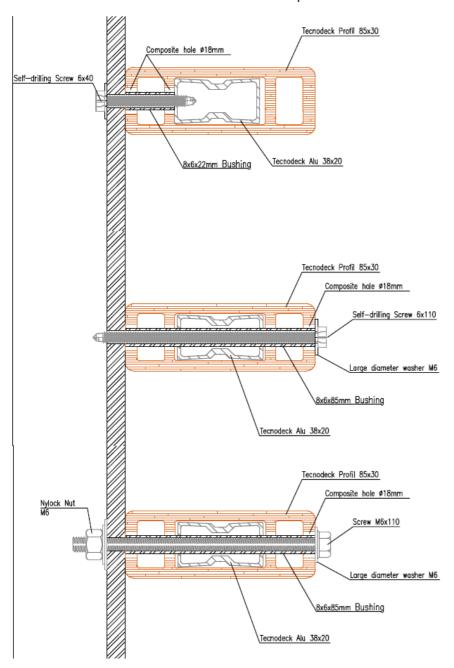

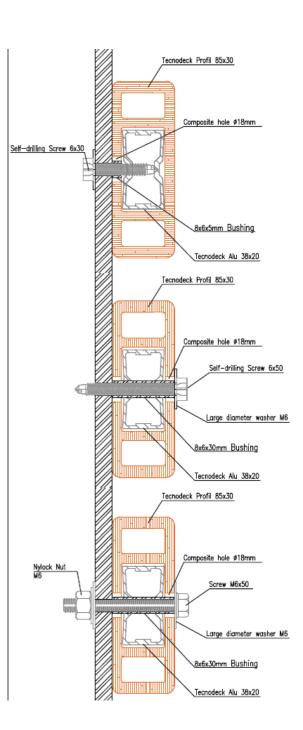

If in any doubt, please contact TECNODECK.



**13 400 AUBAGNE - FR** 

Tel: +33 442 189 142 Fax: +33 442 189 285 Email: info@kotebat.fr